

<b>CANON</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
PowerShot A70/75/80/85/95	Canon LA DC 52D	Egg adapter ring: 52mm to 46mm
PowerShot A520/510/610/620	Canon LA DC 52F	EGG adapter ring: 52 to 46mm
PowerShot G1/G2/G3	Canon LA DC 58	EGG adapter ring: 58 to 49mm & 49mm to 46mm
PowerShot G5/G6	Canon LA DC 58B	EGG adapter ring: 58 to 49mm & 49mm to 46mm
PowerShot G7/G9	Canon LA DC 58H	EGG adapter ring: 58 to 49mm & 49mm to 46mm
PowerShot S30/40/45/50	CKC S30S40 AD	EGG adapter ring: 37 to 46mm
PowerShot S60/70	Canon LA DC 10	EGG adapter ring: 37 to 46mm
PowerShot S80	Canon LA DC 20	EGG adapter ring: 37 to 46mm
PowerShot S1is	Canon LA HDC 10	EGG adapter ring: 52 to 46mm
PowerShot S2is/S3is/S5is	Canon LA HDC 20	EGG adapter ring: 58 to 49mm & 49mm to 46mm
PowerShot A700/710/640/630/620	canon LA DC 58G	EGG adapter ring: 58 to 49mm & 49mm to 46mm
PowerShot A540/530	canon LA DC 52F	EGG adapter ring: 52 to 46mm

<b>SONY</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
Cyber shot DSC-F707/717/828	Not Required	EGG adapter ring: 58 to 49mm & 49 to 46mm
Cyber Shot H1/H2/H5	Not Required	EGG adapter ring: 58 to 49mm & 49 to 46mm
Cyber Shot H7/H9	Any stepping ring combination 74mm to 58mm	EGG adapter ring: 58 to 49mm & 49 to 46mm
Cyber shot DSC S 60/90	Sony VAD PEB 30	Any Stepping ring 30 to 37mm & EGG adapter ring 37 to 46mm
Cyber shot DSC S 70/75/85	Sony VAD S 70	EGG adapter ring: 52 to 46mm
Cyber shot DSC-F505V	Not Required	EGG adapter ring: 58 to 49mm & 49 to 46mm
Cyber Shot P 100/150	Sony VDA PHB 30	Any Stepping ring 30 to 37mm & 37 to 46mm
Cyber Shot DSC V1/V3	Raynox RT 5245 VW	EGG adapter ring: 52 to 46mm
Cyber Shot W1/W5/W7	Sony VDA WA30	EGG adapter ring: 30 to 37mm & 37 to 46mm
Cyber Shot W50/w100	Sony VAD WB 30mm	Any Stepping ring 30 to 37mm & 37 to 46mm
Mavica MVC CD200/250	Raynox AD	EGG adapter ring: 52 to 46mm
Mavica MVC-CD300/400/500	Sony VDA S 70	EGG adapter ring: 52 to 46mm
Mavica MVC-CD1000	Not Required	EGG adapter ring: 52 to 46mm

<b>NIKON</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
CoolPix-8800	Raynox Adapter	EGG adapter ring: 52 to 46mm
CoolPix-8700	Nikon UR E 12	No Adapter/Stepping ring Required
CoolPix-8400	Nikon UR E 14	No Adapter/Stepping ring Required
CoolPix-5700	Nikon UR-E12	No Adapter/Stepping ring Required
CoolPix-5400	Nikon UR-E10	No Adapter/Stepping ring Required
CoolPix-5000	Nikon UR-E5	EGG adapter ring: 28 to 37mm & 37 to 46mm
CoolPix-P 5000	Ricoh make hood & adapter HA-1	
CoolPix-990/950/995	Nikon UR-E7	EGG adapter ring: 28 to 37mm & 37 to 46mm
CoolPix-880/4200	Nikon UR-E2	EGG adapter ring: 28 to 37mm & 37 to 46mm
CoolPix-800/885/4300/4500/4600	Nikon UR-E4 + UR-E7	EGG adapter ring: 28 to 37mm & 37 to 46mm
CoolPix-775	Nikon UR E3	EGG adapter ring: 28 to 37mm & 37 to 46mm

<b>OLYMPUS</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
Camedia C700/720/730/740/750/765/770	Olympus CLA-4	EGG adapter ring: 55 to 49mm & 49 to 46mm
Camedia SP-550UZ	Olympus CLA-10	
Camedia SP-510UZ/500	Olympus CLA-4	EGG adapter ring: 55 to 49mm & 49 to 46mm
Camedia C8080	Olympus CLA-8	EGG adapter ring: 58 to 49mm & 49 to 46mm
Camedia C5050/5060/7070	Raynox Adapter	EGG adapter ring: 52 to 46mm
Camedia C5000	Olympus CLA-6	EGG adapter ring: 55 to 49mm & 49 to 46mm
Camedia C-4100	Olympus CLA-5	EGG adapter ring: 55 to 49mm & 49 to 46mm
Camedia C4000/4040	Olympus CLA-1	EGG adapter ring: 43 to 46mm
Camedia C3000Z/3020Z/3030Z/3040Z	Olympus CLA-1	EGG adapter ring: 43 to 46mm
Camedia C2100	Not required	EGG adapter ring: 49 to 46mm
Camedia C2500	Not required	EGG adapter ring: 43 to 46mm

<b>FUJI</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
FinePix S602/4900/5000/5100/5500	Fuji AR FX9	EGG adapter ring: 55 to 49mm & 49 to 46mm
FinePix 6900/7000Z	Fuji AR FX9	EGG adapter ring: 55 to 49mm & 49 to 46mm
FinePix S3000/3100/3800	Fuji AR FX3	EGG adapter ring: 55 to 49mm & 49 to 46mm
FinePix E550 Fuji AR	Fuji AR FX2	EGG adapter ring: 43 to 46mm
FinePix E500/510	Fuji AR FXE01	EGG adapter ring: 43 to 46mm
FinePix F810	HKDCPLUS for F810	EGG adapter ring: 37 to 46mm
FinePix F420	HKDCPLUS for F420	EGG adapter ring: 37 to 46mm
FinePix A310	HKDCPLUS for A310	EGG adapter ring: 37 to 46mm

<b>PANASONIC</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
Lumix FZ 1/2/3	Raynox	EGG adapter ring: 52 to 46mm
Lumix FZ 4/5/6/10/15/20	Raynox RT 5264P	EGG adapter ring: 52 to 46mm
Lumix FZ 18	Panasonic DMW-LA3	EGG adapter ring: 55 to 49mm & 49mm to 46mm
Lumix FZ 7/8	Panasonic DMW-LA2	EGG adapter ring: 55 to 49mm & 49mm to 46mm
Lumix FX 7	HKDC Panasonic DMC FX 7	EGG adapter ring: 37 to 46mm
Lumix FZ 30/50	Not required	EGG adapter ring: 55 to 49mm & 49mm to 46mm
Lumix DMC-LC 1	Panasonic DMW-LST6969mm-82mm	Step down ring 82mm-72mm, 72mm-58mm, EGG adapter ring: 58 to 49mm & 49 to 46mm

<b>KODAK</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
EASYSHARE P880	Kodak P880	EGG adapter ring: 55 to 49mm & 49mm to 46mm
EASYSHARE P850/P712	Kodak P850/P712	EGG adapter ring: 55 to 49mm & 49mm to 46mm
EASYSHARE Z612	KODAK 49 to 55 mm	EGG adapter ring: 55 to 49mm & 49mm to 46mm
EASYSHARE Z730/Z760/DX7630	Kodak DX7630/Z760	EGG adapter ring: 37 to 46mm
EASYSHARE DX6490/7590/Z7590	Kodak DX6490/7590	EGG adapter ring: 55 to 49mm & 49mm to 46mm
EASYSHARE Z740/710/650	KODAK 45.5 to 55 mm	EGG adapter ring: 55 to 49mm & 49mm to 46mm
EASYSHARE Z730/DX7440	KODAK Z730/DX7440	EGG adapter ring: 37 to 46mm
EASYSHARE CX6445/DX6340/6440	KODAK DX6340/DX6440	EGG adapter ring: 37 to 46mm

EPSON M700, M700, M700 RICOH R500, R500 EGG adapter ring: 37 to 46mm

<b>CASIO</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
EX P600/700	Casio LU 60A	EGG adapter ring: 58 to 49mm & 49mm to 46mm
QV 2900UX	Not required	EGG adapter ring: 43 to 46mm
QV 3500	Raynox RT52475	EGG adapter ring: 52 to 46mm
QV 4000	Casio LU 35A	EGG adapter ring: 55 to 49mm & 49mm to 46mm
QV 5700	Raynox RT52475	EGG adapter ring: 52 to 46mm

<b>TOSHIBA</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
PDR-M70	Toshiba PDR AR52	EGG adapter ring: 43 to 46mm
PDR-M71, M81	Tiffen TOSH M81	EGG adapter ring: 37 to 46mm
PDR-M500, M700	Not required	EGG adapter ring: 52 to 46mm
PDR-M3300	Tiffen TOSH 3300	EGG adapter ring: 43 to 46mm
PDR-M4300	Tiffen TOSH 4300	EGG adapter ring: 43 to 46mm

<b>HP</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
PhotoSmart 618	Tiffen HP 618AD	EGG adapter ring: 37 to 46mm
PhotoSmart 735	Tiffen HP 735AD	EGG adapter ring: 37 to 46mm
PhotoSmart 850/945	Tiffen HP 850AD	EGG adapter ring: 55 to 49mm & 49mm to 46mm
PhotoSmart 912	Not required	EGG adapter ring: 49 to 46mm

<b>PENTAX</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
OPTIO EI 200	Tiffen AD EI 200	EGG adapter ring: 37 to 46mm
OPTIO EI 2000	Not required	EGG adapter ring: 49 to 46mm
OPTIO MX/MX4	Not required	EGG adapter ring: 37 to 46mm

<b>KYOCERA</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
Finecam M400	Raynox RT5249	EGG adapter ring: 52 to 46mm
Finecam M410R	Not required	EGG adapter ring: 52 to 46mm

<b>SAMSUNG</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
Digimax V50	Samsung SLA-3537	EGG adapter ring: 37 to 46mm
Digimax V70	Samsung SLA-3537	EGG adapter ring: 37 to 46mm

<b>KONICA-MINOLTA</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
DiMAZE 7	Not required	EGG adapter ring: 49mm to 46mm
DiMAZE Z1/Z2	Minolta ZCA-100	EGG adapter ring: 52 to 46mm
DiMAZE Z3/Z5/Z6	Minolta ZCA-300	EGG adapter ring: 52 to 49mm
DiMAZE Z10/Z20	Minolta ZCA-200	EGG adapter ring: 52 to 46mm

<b>EPSON</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
Photo PC 3000Z/3100Z	Not required	EGG adapter ring: 49 to 46mm

<b>RICOH</b>		
<b>CAMERA</b>	<b>Lens Adapter</b>	<b>Stepping Ring</b>
Caplio GX8	Ricoh HA-1	
Caplio GX	Ricoh HA-1	
Caplio GX 100	Ricoh HA-2	